

Data sheet

Pressure switch

KP



KP pressure switchs are for use in refrigeration and air conditioning systems to give protection against excessively low suction pressure or excessively high discharge pressure.

KP pressure switches are also used for starting and stopping refrigeration compressors and fans on air-cooled condensers.

A KP pressure switch can be connected directly to a single-phase AC motor of up to approx. 2 kW or installed in the control circuit of DC motors and large AC motors.

KP pressure switches are fitted with a single-pole double-throw (SPDT) switch. The position of the switch is determined by the pressure switch setting and the pressure at the connector. KP pressure switches are available in IP30, IP44 and IP55 enclosures.

Features

- Ultra-short bounce time thanks to snap-action function (reduces wear to a minimum and increases reliability)
- Manual trip function (electrical contact function can be tested without the use of tools)
- Types KP 6, KP 7 and KP 17 with fail-safe double bellows element
- · Vibration and shock resistant
- · Compact design
- · Fully welded bellows element
- High reliability both electrically and mechanically

Approvals

CE-marked in accordance with:

- LVD 2014/35/EU
(EN 60947-1, EN 60947-4-1, EN 60947-5-1)

- PED 2014/68/EU, category IV (EN 12263):
KP 1, KP 2, KP 6, KP 7 and KP 17

Underwriters Laboratories Inc., UL listed China Compulsory Certificate, CCC

Ship approvals

Germanischer Lloyd, GL Det Norske Veritas, Norway, DNV Registro Italiano Navale, RINA Bureau Veritas, BV Lloyd's Register, LR Russian Maritime Register of Shipping, RMRS



Technical data

| Ambient temperature | | -40 – 65 °C (80 °C for max. 2 hours). | | | |
|------------------------------|----------------------------|---------------------------------------|--|--|--|
| Ambient temperature (PE | D approved units) | -25 − 65 °C (80 °C for max. 2 hours). | | | |
| Media temperature *) | | -50 − 100 °C | | | |
| | | LP: PS / MWP = 17 bar | | | |
| Max. working pressure | | HP: PS / MWP = 35 bar | | | |
| | | KP 6: PS / MWP = 46.5 bar | | | |
| | | LP: P _e = 20 bar | | | |
| Max. test pressure | | HP: P _e = 35 bar | | | |
| | | KP 6: P _e = 46.5 bar | | | |
| | | AC1 =16 A, 400 V | | | |
| Contact load | Alternating current | AC3 = 16 A, 400 V | | | |
| Contact load | | AC15 = 10 A, 400 V | | | |
| | Direct current | DC13 = 12 W, 220 V control current | | | |
| | solid / stranded | 0.75 – 2.5 mm ² | | | |
| Wire dimensions | flexible, without ferrules | 0.7 – 2.5 mm ² | | | |
| | flexible, with ferrules | 0.5 – 1.5 mm ² | | | |
| Tightening torque | | max. 2 Nm | | | |
| Rated impulse voltage | | 4 kV | | | |
| Pollution degree | | 3 | | | |
| Short circuit protection, fu | rse | 16 A | | | |
| Insulation | | 400 V | | | |
| Enclosure | | IP30 / IP44 / IP55 | | | |

^{*)} The media temperature can be out of ambient temperature range under necessary condition that temperature inside KP must be kept in ambient temperature range.

Contact systems

| Low pressure (LP) | | | High pressure (HP) |
|-----------------------|-----------------------|-------------|--|
| SPDT A 16A 1 SLPS 2 | MAFOSS (©) A60-943.13 | ~- | SPDT 4 8 SSENTING 16A 1 HPC 2 |
| Dual pressure (LP/HP) | Dual press | ure (LP/HP) | Dual pressure (HP/HP) |
| SPDT+LP signal | SPDT+LP- | HP signal | SPST SPST |



Technical data

(continued)

Cable connection

The cable entry can be used for $6-14 \, \text{mm}$ dia. cables. A Pg 13.5 screwed cable entry can also be used for $6-14 \, \text{mm}$ cable. With $8-16 \, \text{mm}$ cable a standard Pg 16 screwed cable entry can be used.

Enclosure

IP30 to EN 60529 / IEC 60529 Enclosure IP30 is obtained when the units without top cover are mounted on a flat surface or bracket. The bracket must be fixed to the unit so that all unused holes are covered.

IP44 to EN 60529 / IEC 60529 Enclosure IP44 is obtained when the units with top cover are mounted on a flat surface or bracket. The bracket must be fixed to the unit so that all unused holes are covered. KP pressure switches with auto reset are supplied with top cover. For KP pressure switches with manual reset, the top cover must be separately ordered (**code no. 060-109766** for single pressure switches and **code no. 060-109866** for dual pressure switches).


IP55 to EN 60529 / IEC 60529
IP55 is obtained when the KP pressure switches are mounted in an IP55 enclosure,
(code no. 060-033066 for single pressure switches and code no. 060-035066 for dual pressure switches).
IP55 enclosure has to be ordered separately.

Materials in contact with the medium

| Туре | Material |
|---|---|
| KP 1, KP 2, KP 5, KP 6, | Tinbronze, no. CW452K, EN 1652 |
| KP 7, KP 15 and KP 17 | Nickel plated free cutting steel, no. 1.0737 / 1.0718, EN 10277 |
| | Stainless steel 18/8, no. 1.4306, EN 10088-2 |
| | Free cutting steel, no. 1.0737, EN 10277 |
| | Cold forming steel, no. 1.0338, EN 10139 |
| KP 1A, KP 5A, KP 6A, KP 7A and KP 15A only | Steel, no 1.0308, EN 10305 |
| , | Free cutting steel, no. 1.0715, EN10277 |
| | Free cutting steel, no. 1.0718, EN 10277 |
| | Aluminium, no. AW-3005, EN 573 |



Ordering



For R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R438A, R448A, R449A, R450A, R452A, R507A, R513A

For complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.

| | | Low pressure (LP) | | 11:(110) | | Reset | | | Code no. | | | |
|----------|-------|------------------------------|-----------------------------|------------------------------|-----------------------------|-----------------------|------------------------|----------------------------|--|---------------------------|-----------------------|--|
| D | Туре | Low pres | Low pressure (LF) | | High pressure (HP) | | set | | Connection | | | |
| Pressure | | Regulating range [bar] | Differential Δp [bar] | Regulating range [bar] | Differential Δp [bar] | Low pressure LP | High pressure HP | Contact system | ¹/₄ in. 6 mm flare | ¹/₄ in. ODF solder | 6 mm ODF solder | |
| Low | KP 1 | -0.2 - 7.5 | 0.7 – 4.0 | - | - | Auto | - | SPDT | 060-110166 ³) | 060-111266 ³) | 060-111066 ³) | |
| Low | KP 1 | -0.2 – 7.5 | 0.7 – 4.0 | - | - | Auto | - | SPDT | 060-114166 ¹) ³) | - | - | |
| Low | KP 1 | -0.9 - 7.0 | 0.7 | - | _ | Man. (Min.) | = | SPDT | 060-110366 | 060-111166 | 060-110966 | |
| Low | KP 2 | -0.2 - 5.0 | 0.4 – 1.5 | - | = | Auto | - | SPDT | 060-112066 ³) | - | 060-112366 ³) | |
| High | KP 5 | - | - | 8 – 32 | 1.8 – 6.0 | - | Auto | SPDT | 060-117166 ³) | 060-117966 ³) | 060-117766 ³) | |
| High | KP 5 | - | - | 8 – 32 | 3 | - | Man. (Max.) | SPDT | 060-117366 | 060-118066 | - | |
| Dual | KP 15 | -0.2 – 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Auto | SPDT + LP signal | 060-124166 ³) | 060-125466 ³) | = | |
| Dual | KP 15 | -0.2 - 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Man. (Max.) | SPDT + LP signal | 060-124366 | _ | - | |
| Dual | KP 15 | -0.2 – 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Man. (Max.) | SPDT + LP signal | 060-114866¹) | _ | - | |
| Dual | KP 15 | -0.9 - 7.0 | 0.7 | 8 – 32 | 4 | Man. (Min.) | Man. (Max.) | SPDT + LP signal | 060-124566 | _ | - | |
| Dual | KP 15 | -0.9 - 7.0 | 0.7 | 8 – 32 | 4 | Conv. ²) | Conv. ²) | SPDT + LP signal | 060-126166 | = | = | |
| Dual | KP 15 | -0.2 - 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Auto | SPDT + LP and HP signal | 060-126566 ³) | 060-129966 ³) | - | |
| Dual | KP 15 | -0.2 – 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Man. (Max.) | SPDT + LP and HP signal | 060-126466 | 060-128466 | _ | |
| Dual | KP 15 | -0.2 - 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Conv.²) | Conv.²) | SPDT + LP and HP signal | 060-115466 ³) | 060-001066 ³) | - | |
| Dual | KP 15 | -0.9 - 7.0 | 0.7 | 8 – 32 | 4 | Conv.²) | Conv. ²) | SPDT + LP and HP signal | 060-122066 | _ | _ | |

For R717, R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R438A, R448A, R449A, R450A, R452A, R507A, R513A

For complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.

| | | | (I D) | I Ii ada sasas | (LID) | 0 | | | Code no. | |
|----------|--------|-------------------|--------------------|--------------------|--------------------|-----------------|----------------------|----------------------------|------------|---------------------------|
| | | Low pressure (LP) | | High pressure (HP) | | K | eset | | Connection | |
| Pressure | Type | Regulating range | Differential Δp | Regulating range | Differential Δp | Low pressure | High pressure | Contact system | M10 × 0.75 | 1 m cap. tube with |
| | | [bar] | [bar] | [bar] | [bar] | LP | HP | | | M10 × 0.75 |
| Low | KP 1A | -0.2 – 7.5 | 0.7 – 4.0 | - | - | Auto | = | SPDT | 060-116266 | 060-116066 ³) |
| Low | KP 1A | -0.9 - 7.0 | 0.7 | = | - | Man. (Min.) | = | SPDT | = | 060-116166 |
| High | KP 5A | - | - | 8 – 32 | 1.8 – 6.0 | - | Auto | SPDT | - | 060-123066 ³) |
| High | KP 5A | - | - | 8 – 32 | 3 | - | Man. (Max.) | SPDT | 060-115366 | 060-123166 |
| Dual | KP 15A | -0.2 - 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Auto | SPDT + LP and HP signal | 060-129566 | 060-129366 ³) |
| Dual | KP 15A | -0.2 - 7.5 | 0.7 – 4.0 | 8 – 32 | 4 | Auto | Man. (Max.) | SPDT + LP and HP signal | 060-129666 | 060-129466 |
| Dual | KP 15A | -0.9 - 7.0 | 0.7 | 8 – 32 | 4 | Conv. 2) | Conv. ²) | SPDT + LP signal | - | 060-128366 |

¹⁾ Pressure switches with gold-plated contacts

²) Conv.: optional automatic or manual reset ³) Enclosure IP44



Pressure switches PED 2014/68/EU approved; EN 12263

For R22, R134a, R404A, R407A, R407C, R407F, R410A*), R422B, R422D, R438A, R448A, R449A, R450A, R452A, R507A, R513A

*) for KP6W, KP6B

For complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.


| | Type ¹) | _ | 4> | | | _ | | | Code no. | |
|----------|---------|------------------------|-----------------------------|------------------------|-----------------------------|-----------------------|----------------------------|----------------------------|--|---------------------------|
| | | Low pressure (LP) | | High pressure (HP) | | Reset | | | Connection | |
| Pressure | | Regulating range [bar] | Differential Δp [bar] | Regulating range [bar] | Differential Δp [bar] | Low pressure LP | High pressure HP | Contact system | ¹/₄ in. 6 mm flare | 6 mm ODF solder |
| Low | KP 1 | -0.2 – 7.5 | 0.7 – 4.0 | - | - | Auto | - | SPDT | 060-110166 ²) | 060-111066 ²) |
| Low | KP 1 | -0.9 – 7 | 0.7 | - | - | Man. (Min.) | - | SPDT | 060-110366 | 060-110966 |
| Low | KP 2 | -0.2 – 5 | 0.4 – 1.5 | - | - | Auto | - | SPDT | 060-112066 ²) | 060-112366 ²) |
| High | KP 6W | - | - | 8 – 42 | 4 – 10 | - | Auto | SPDT | 060-519066 ²) | - |
| High | KP 6B | - | - | 8 – 42 | 4 | - | Man. (Max.) | SPDT | 060-519166 | - |
| High | KP 7W | - | - | 8 – 32 | 4 – 10 | - | Auto | SPDT | 060-119066 ²) | 060-120366 ²) |
| High | KP 7B | - | - | 8 – 32 | 4 | - | Man. (Max.) | SPDT | 060-119166 | - |
| High | KP 7S | = | - | 8 – 32 | 4 | - | Man. (Max.) | SPDT | 060-119266 ²) | = |
| Dual | KP 7BS | - | - | 8 – 32 | 4 | - | Man. (Max.) Man. (Max.) | SPST | 060-120066 | - |
| Dual | KP 17W | -0.2 – 7.5 | 0.7 – 4 | 8 – 32 | 4 | Auto | Auto | SPDT + LP and HP signal | 060-127566 ²) | 060-127666 ²) |
| Dual | KP 17W | -0.2 - 7.5 | 0.7 – 4 | 8 – 32 | 4 | Auto | Auto | SPDT+ LP signal | 060-126766 ²) | = |
| Dual | KP 17B | -0.2 – 7.5 | 0.7 – 4 | 8 – 32 | 4 | Auto | Man. (Max.) | SPDT | 060-126866 | 060-127466 |
| Dual | KP 17WB | -0.2 - 7.5 | 0.7 – 4 | 8 – 32 | 4 | Auto | Conv.4) | SPDT + LP and HP signal | 060-539766 ²) ³) | - |

For R717, R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R438A, R448A, R449A, R450A, R452A, R507A, R513A For complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.

| Proceuro | essure Type | Low pressure (LP) | | High pressure (HP) | | Reset | | Contact | Code no. Connection | |
|----------|-------------|------------------------------|-----------------------------|------------------------------|-----------------------------|-----------------------|----------------------------|---------|---------------------|-------------------------------------|
| riessuie | | Regulating range [bar] | Differential Δp [bar] | Regulating range [bar] | Differential Δp [bar] | Low pressure LP | High pressure HP | system | M10 × 0.75 | 1 m cap. tube with M10 × 0.75 |
| Low | KP 1A | -0.2 – 7.5 | 0.7 – 4.0 | - | - | Auto | - | SPDT | 060-116266 | 060-116066 ²) |
| Low | KP 1A | 0.9 – 7 | Fixed 0.7 | - | - | Man. (Min.) | - | SPDT | - | 060-116166 |
| Dual | KP 7ABS | - | - | 8 – 32 | Fixed 4 | - | Man. (Max.) Man. (Max.) | SPST | - | 060-120566 |

¹⁾ W = PSH (pressure switch), B = PZH (pressure switch with ext. reset),

Pressure switch setting with convertible reset

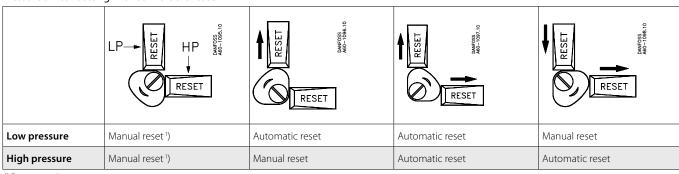

¹⁾ Factory setting

S = PZHH (pressure switch with int. reset)
²) Enclosure IP44


³) Factory setting: LP side: Range 1 bar Pe, Diff. 1 bar; HP side: Range 18 bar Pe, Diff. 4 bar fixed

⁴⁾ Conv.: optional automatic or manual reset




Design / Function

Pressure switch, type KP

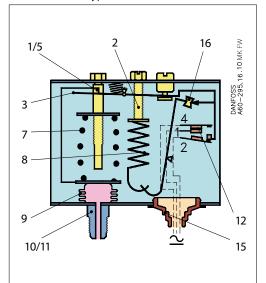


KP 1, KP 2, KP 5

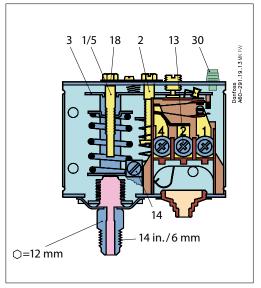


KP 15

- 1. Low pressure (LP) setting spindle
- 2. Differential setting spindle, (LP)
- 3. Main arm
- 5. High pressure (HP) setting spindle
- 7. Main spring
- 8. Differential spring
- 9. Bellows
- 10. LP connection
- 11. HP connection
- 12. Switch
- 13. Terminals
- 14. Earth terminal
- 15. Cable entry
- 16. Tumbler
- 18. Locking plate
- 30. Reset button

KF I.

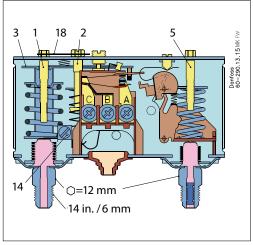

Capillary tube for KP 1A, KP 5A and KP 15A

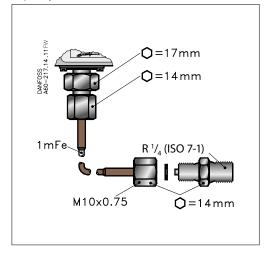

The switch in the KP has a snap-action function and the bellows moves only when the cut-in or cut-out value is reached.

The bellows becomes connected to the low or high pressure side of the plant through connection (10) or (11).


The design of the KP pressure switch gives the following advantages:

- ī high contact load
- ī ultra-short bounce time
- ī high resistance to pulsation
- vibration resistance up to 4 g in the range 0 – 1000 Hz
- ī long mechanical and electrical life




Design (continued)


KP 7W, flare

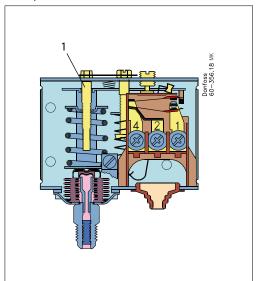

KP 7W, solder

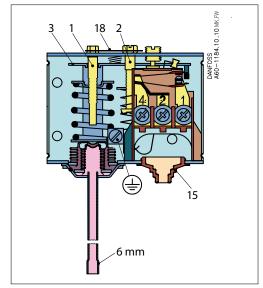

KP 7BS

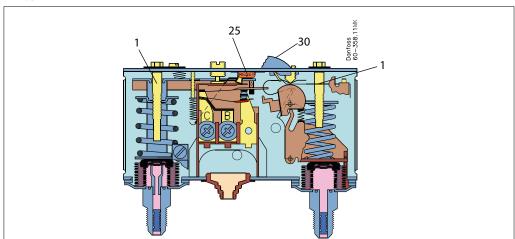

- 1. Pressure setting spindle
- 2. Differential setting spindle
- 3. Main arm
- 15. Cable entry
- 18. Locking plate
- 25. Int. reset arm
- 30. Ext. reset button

Types KP1, KP1A, KP2, KP6, KP6A, KP7 and KP17 units with designation W, B or S have been tested and approved by TÜV, Rheinland in accordance with EN 12263.

Types KP6, KP6A, KP7 and KP17 have a double bellows: an outer bellows and a regulating bellows. When system pressure exceeds the set value, the KP will automatically stop the plant. The double bellows system prevents loss of charge in the event of bellows rupture.

A rupture in the inner bellows will cause the control cut-out pressure to fall about 3 times less the set value, thus the refrigeration plant compressor will stop.

A rupture in the outer bellows will cause the control cut-out pressure to fall to about 3 bar under the set value, thus providing a fail-safe function.

Versions with designation W or AW cut in again automatically when the pressure has fallen to the set value minus the differential.

Versions with designation B or AB can be cut in manually with the external reset button when the pressure in KP1 has increased 0.7 bar above set value and in KP6 and KP7 has fallen 4 bar under the set value.

Versions with designation S or AS can be cut in manually with the internal reset arm when the pressure has fallen 4 bar under the set value.

All KP pressure switches, including those which are PED-approved, operate independently of changes in the ambient temperature around the control housing. Therefore the set cut-out pressure and differential are held constant provided the permissible ambient temperatures are not exceeded.



Terminology

Reset

1. Manual (Min. / Max.) reset: Units with manual reset can only be reset during operation by activation of the reset

during operation by activation of the reset button

2. Automatic reset:

After operational stop, these units reset automatically

3. Convertible reset:

Units with optional reset can be activated by automatic and/or manual reset

Permissible working pressure

The permissible working pressure is determined by the pressure that can be safely allowed in the refrigerating system or any of the units within it.

Test pressure

The test pressure is the pressure used in strength tests and/or leakage tests on refrigerating systems or individual parts in systems. The test pressure is designated $P_{\rm e}$.

"Snap function"

A certain contact force is maintained until irrevocable "snap" is initiated. The time during which the contact force approaches zero is thus limited to a very few milliseconds. Therefore contact bounce cannot occur as a result of, for example, slight vibrations, before the cut-out point. Contact systems with "Snap function" will change over even when micro-welds are created between the contacts during cut-in. A very high force is created during cut-out to separate the contacts. This force immediately shears off all the welds. Thus the cut-out point of the unit remains very accurate and completely independent of the magnitude of the current load.

Setting

*Pressure switches with automatic reset – LP:*Set the LP start pressure on the "CUT-IN" scale (range scale). One rotation of the low pressure spindle ~ 0.7 bar.Set the LP differential on the "DIFF" scale. One rotation of the differential spindle ~ 0.15 bar.The LP stop pressure is the LP start pressure minus the differential.

Note:

The LP stop pressure must be above absolute vacuum ($P_e = -1$ bar)!

If with low stop pressure the refrigeration compressor will not stop, check to ensure that the differential value has not been set too high!

Pressure switches with automatic reset – HP:

Set the HP pressure on the "CUT-OUT" scale. One rotation of the HP spindle \sim 2.3 bar. Set the HP differential on the "DIFF" scale. One rotation of the differential spindle \sim 0.3 bar. The HP start pressure is the HP stop pressure minus the differential.

Start and stop pressures for both the LP and HP sides of the system should always be checked with an accurate pressure gauge.

Pressure switches with manual reset

Set the stop pressure on "CUT-OUT" scale (range scale).


Low pressure switches can be manually reset when the pressure is equal to the stop pressure plus the differential.


High pressure switches can be manually reset when the pressure is equal to the stop pressure minus the differential.




Dimensions [mm] and weights [kg]


Pressure switchess with flare connection

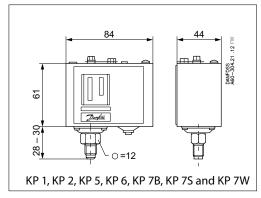

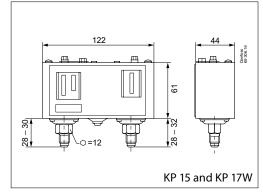



$M10 \times 0.75$ connection

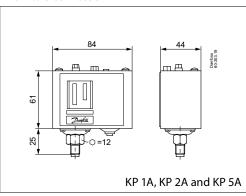

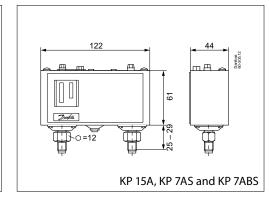


Solder connection

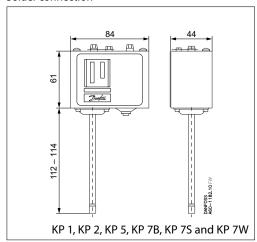

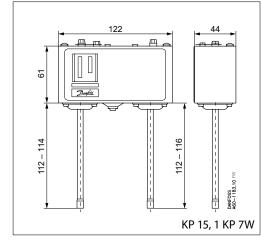

KP with top cover

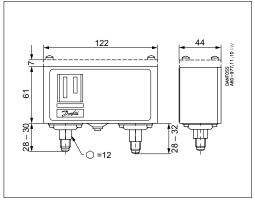


Net weight:KP 1, KP 2, KP 5 and KP 7: approx. 0.3 kg KP 15, KP 17 and KP 7BS: approx. 0.5 kg KP 1A and KP 5A: approx. 0.3 kg KP 15A and KP 7ABS: approx. 0.5 kg




Dimensions [mm] and weights [kg] (continued)

IP55 enclosure

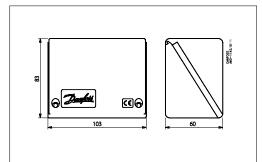

IP55 enclosure for dual types

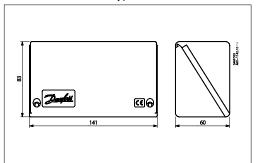

Weld nipple for KP-A

